

REPLACING THERMOSTAT

MODELS: GL2.5, GL4.0, GL6+, GL2.5Ti,
GL4.0Ti, GL8Ti



WARNING

ELECTRICITY IS EXTREMELY DANGEROUS
SO TAKE EXTRA PRECAUTIONS WHEN
PERFORMING ANY WORK TO THE HEATER

Removing thermostat

1. Unplug or turn off the breaker supplying power to the heater
2. Remove the cover from the heater, see Figure 1 below
3. Unscrew the mounting screws on thermostat. Fig 2 (7)
4. Remove the thermostat push on leads. Fig 2 (5 & 6)
5. Unscrew the hot wire .Fig 2 (2)
6. Unscrew the neutral wire.Fig 2 (3)
7. Pull out the indicator light from the right side of thermostat.Fig 2 (8)


Replacing the thermostat - see figure 2

1. Attach the hot wire (2) and the neutral wire(3) back to the thermostat
2. Reconnect thermostat lead wires. (5 & 6)
3. Place the indicator light in the thermostat. (8)
4. Attach the new thermostat on the heater with the mounting screws (7)
5. Replace front cover

Figure 1

A Remove the Blue circle cover with the name Ariston on the left of the heater .Gently pop the small cover from the left side ONLY!!!

B Remove the cover screw (Phillips) This holds the front panel in place.

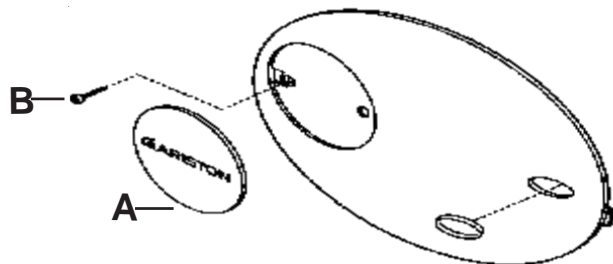

- 1-Element
- 2-Hot/ black wire
- 3-Neutral /white wire
- 4-Ground/Green wire
- 5-Long white element wire
- 6-Short white element wire
- 7-Thermostat Mounting screws
- 8-Indicator Light

